

1693.12







EN

Accessories for swiveling vice  
jaw 1693.1 and 1693.1S

SLO

Set elementov za glavo 1693.1  
in 1693.1S

## USAGE

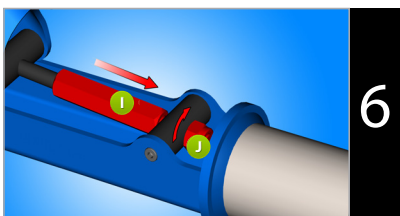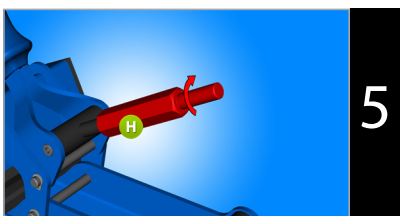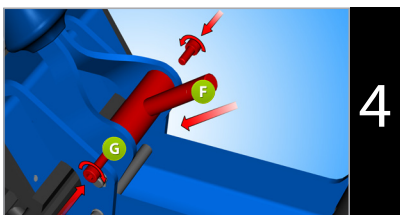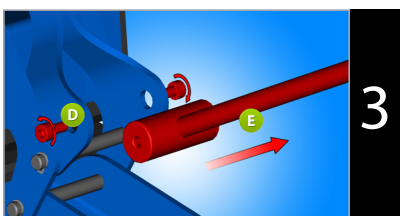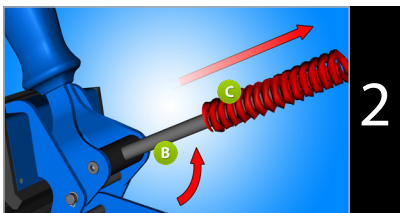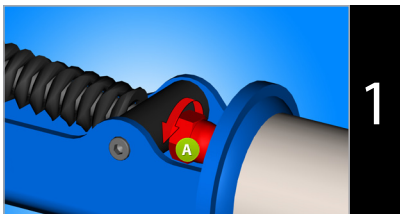

**1** With a wrench unscrew the nut M8 (A) from the lever handle. ATTENTION while unscrewing: Spring is compressed and may pop out.

**2** Push the handle towards the jaw and pull out the lever handle (B) from the guide lever, then remove the spring (C).

**3** Unscrew the screws M4 (D) from the handle and remove the lever handle (E) which will not be required for the system with the screw.

**4** Insert new lever handle (shorter) (F) between the metal part of the handle and fasten it on the handle with two screws M4 (G).

**5** Screw new setting nut M8 (H) for about half of the lever on the lever handle.

**6** Push the setting nut M8 (I) through the guide lever and with wrench 13 attach a new hex M8. While detain the nut wrench M8 (J) with other 13 wrench. Screw hex nut M8 so that there is a little gap between it and guide lever and that it is possible to screw or unscrew the nut.

**1** S ključem 13 odvijemo matico krovno M8 (A) iz vzvoda ročaja. POZOR pri odvijanju, saj je vzmet stisnjena in lahko pri nepazljivem odvijanju izskoči.

**2** Ročaj potisnemo proti čeljustim, ter s tem iz vodila vzvoda izvlečemo vzvod ročaja (B) in odstranimo vzmet (C). Matice in vzmeti za sistem z vijakom več ne potrebujemo.

**3** Odvijemo imbus vijaka M4 (D) iz ročaja, ter odstranimo vzvod ročaja (E), ki ga tudi za sistem z vijakom ne bomo potrebovali.

**4** Med pločevinasti del ročaja vstavimo nov vzvod ročaja (krajši) (F) in ga pritrdimo z dvema vijakoma imbus M4 (G) v ročaj.

**5** Na vzvod ročaja privijemo novo matico nastavno M8 (H), nekako do polovice vzvoda.

**6** Matico nastavno M8 (I) potisnemo skozi vodilo vzvoda, ter nanj pritrdimo novo matico samovarovalno M8 (J) s ključem 13, ob tem moramo z drugim ključem 13 pridržati matico nastavno M8. Matico samovarovalno M8 privijemo tako, da je med njo in vodilom vzvoda še malenkost zračnosti, da lahko matico nastavno nato z roko privijamo in odvijamo.



[www.uniortools.com](http://www.uniortools.com)